

## MAINTENANCE (CONT'D)

To order replacement filter bags for the Hair Jet contact your local Hair Jet dealer. If unable to reach a local representative please call Galaxie Vacuum at 1-800-238-2294

If you experience a lack of suction:

- Check the filter bag, it may be full
- Check the front of the automatic dustpan for any obstructions
- Check the integrated inlet on the unit to be sure it is closing properly and is not obstructed.
- Check the hose to be sure it is not obstructed.

If you are unable to determine the problem, please contact your local Hair Jet dealer. Do not attempt to trouble shoot the unit beyond what is listed, as any additional tampering may void the warranty.

## TROUBLESHOOTING

If the vacuum unit does not work, check the fuse or breaker on the unit and/or in the electrical panel in your home, and replace any defective part(s) as deemed necessary. Please verify that the unit has been installed properly, according to the instructions in this manual.

Your vacuum cleaning system is designed to collect everyday dry matter (dust). It is approved by authorized testing agencies for dry use only. Do not use on wet surfaces.

We strongly recommend against vacuuming abrasive materials such as cement, plaster and sheetrock dust. This fine dust could work its way into the motor, causing considerable damage. Should you do so inadvertently, immediately clean the filters and, as a precautionary measure, contact your authorized service center to determine the extent of the damage to the unit.

***Remember that in order for your warranty to remain valid, maintenance of the motor and repairs to the unit itself must be carried out by an authorized service center, using original Hair Jet parts.***

## WARRANTY INFORMATION

### LIMITED LIFETIME WARRANTY

Your Hair Jet vacuum cleaner has a one year warranty. This warranty is valid from the date of purchase, for as long as you are the original owner.

Our authorized service center will repair or replace (at Galaxie's discretion) the defective part or parts, free of labor costs, for a period of 1 year.

In order to maintain your warranty, all repairs must be made by an authorized Hair Jet service center, with original Hair Jet parts. Failure to do so could void the warranty.

This warranty excludes normal wear and tear of certain parts such as filters, integrated inlet, automatic dustpan, damages caused (according to Hair Jet) by abusive use (ex.: sheetrock dust, water, etc.), commercial use, the lack of appropriate maintenance, inadequate installation, negligence, natural disasters, accidents, and acts of God.

# HairJet<sup>®</sup>

by GALAXIE™

## OWNER'S MANUAL

Please read this document carefully before using your vacuum cleaning system.

Serial No : \_\_\_\_\_

For parts or service on your Hair Jet Vacuum Cleaner call:

**CVC Incorporated 1-800-238-2294**

OR

**Your local authorized Hair Jet Dealer**



CVC Incorporated, 16 - 18 Ballard Road • Lawrence MA 01843  
www.galaxie-vac.com © 2005 C.V.C. Incorporated

# IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following. Read all instructions before using this appliance.

## WARNING - To reduce the risk of fire, electric shock, or injury:

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children or infirm persons. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without dust bag and/or filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Connect to a properly grounded outlet only. See Grounding Instructions.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. No adaptor should be used with this appliance.

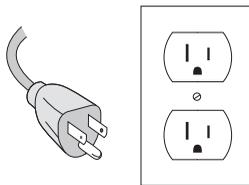


figure 1


## WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120V circuit, and has a grounded plug (figure 1). Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adaptor should be used with this appliance.

## SCHEMATIC – HAIR JET

1. Circuit Breaker
2. Serial Number
3. Automatic Dustpan
4. Integrated Inlet

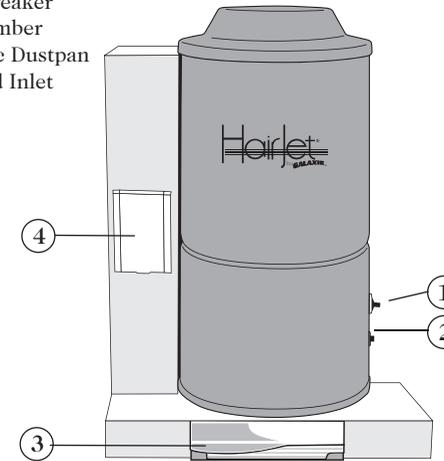

## OPERATING INSTRUCTIONS

Place Hair Jet on a smooth, dry, level surface in close proximity to a 120v electrical outlet.

Plug unit into outlet, and sweep debris to the front of the automatic dustpan. To activate the dustpan, lift up on the dustpan flange with your toe (figure 2-A). To shut unit off, push down on the right side of the dustpan until it clicks in place (figure 2-B).

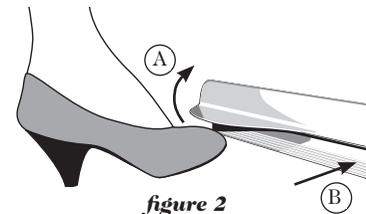


figure 2

To activate the system for use as a central vacuum system, lift up on integrated inlet door and insert hose. Unit will automatically turn on. To shut unit off, unplug the hose.

Note:

If you are unable to store the Hair Jet against a wall, you may want to use the rubber pads for added stability. Place a rubber pad on the bottom of each rear corner of the Hair Jet base. Do not use the rubber pads at the front of the unit.

## HOSE HOOK-UP & INLETS

### If using an On-Off hose...

To start your Hair Jet, simply insert the hose in the vacuum inlet of your choice. Please ensure that the tab on the hose end is properly lined up with the slot in the inlet opening (figure 3). If your hose handle has an integrated on-off switch, simply slide the switch to the "on" position.

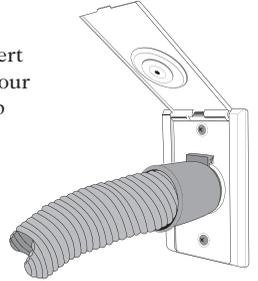


figure 3

## MAINTENANCE

Change the bag when the one in place is full. Frequency will depend on the use of the unit.

1. To access the bag, lift and remove the unit's top cover.
2. Remove the used bag and seal bag opening (adhesive seal provided on each bag). Discard used bag.
3. Install the new bag, ensuring the tabs on the bag adaptor are aligned with the slots in the bag collar (figure 4).

Part Number :  
TDSAC43G

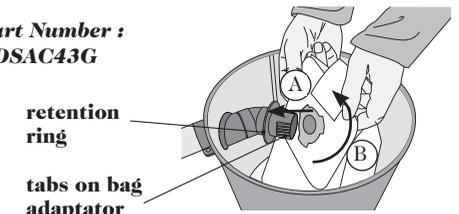


figure 4

4. Ensure adequate sealing by inserting bag as far as the retention ring (figure 4-A). Rotate bag 20° (figure 4-B) to ensure tabs on bag adaptor are no longer aligned with the slots in the bag collar.
5. Replace the unit's top cover.

The disc-shaped filter (figure 6), located between the dust bag and the motor, should be changed once for every three bags, or more often as needed.

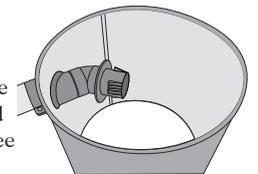


figure 5